

installation guide user manual

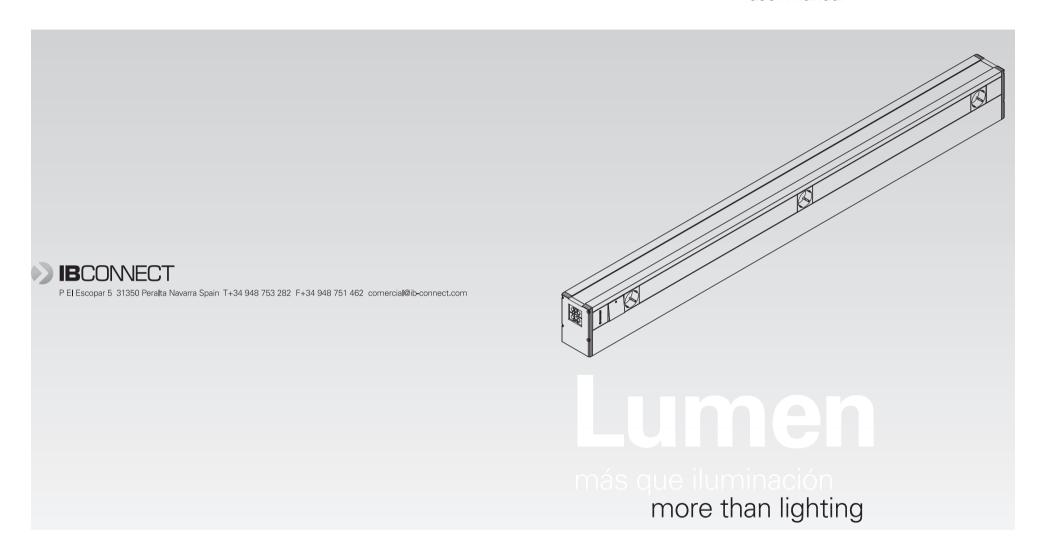




user manual

user manual

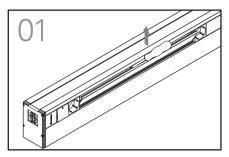


IMPORTANT: Install using a fine-tipped screwdriver.

Remove the aluminum front covers with a finetipped screwdriver, prying as shown in the figure.

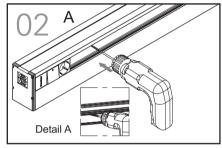


After the covers have been removed, drill two holes, one at each end, as shown in the figure. Make the hole in the slot as shown in detail (A).

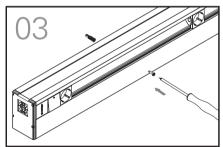

Depending on the wall material, screw anchors may need to be installed. In the case of wood, only wood screws will be required.

Use a screwdriver to secure the light assembly to the wall as shown in the figure.

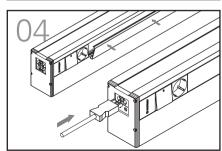


Press the front covers into place.

Connect the power cable to the GST-18 connection.


The product is installed



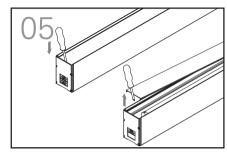

CHANGING THE FLUORESCENT TUBE: Use a fine-tipped screwdriver to pry off the cover as shown in the figure.


When one end has been released, pull up to completely remove the cover.

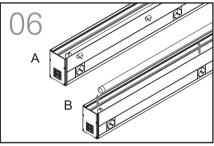

To remove the fluorescent tube, grasp at both ends and turn until the connection pins at the ends are aligned with the lamp socket slots. (A)

Once the connection pins are aligned, pull the fluorescent tube upwards until it is free of the lamp sockets. **(B)**

Replace with another fluorescent tube and repeat the operation in reverse.

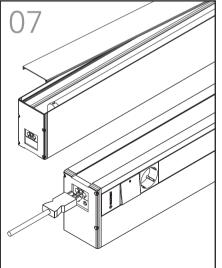

Press the cover back into place and make sure that it is completely snapped in.

Connect the power cable to the GST-18 connection

The product is installed.

For any questions on the profile frame, contact us at:

oficinatecnica@ib-connect.com

